


Current doesn't pass through link bar

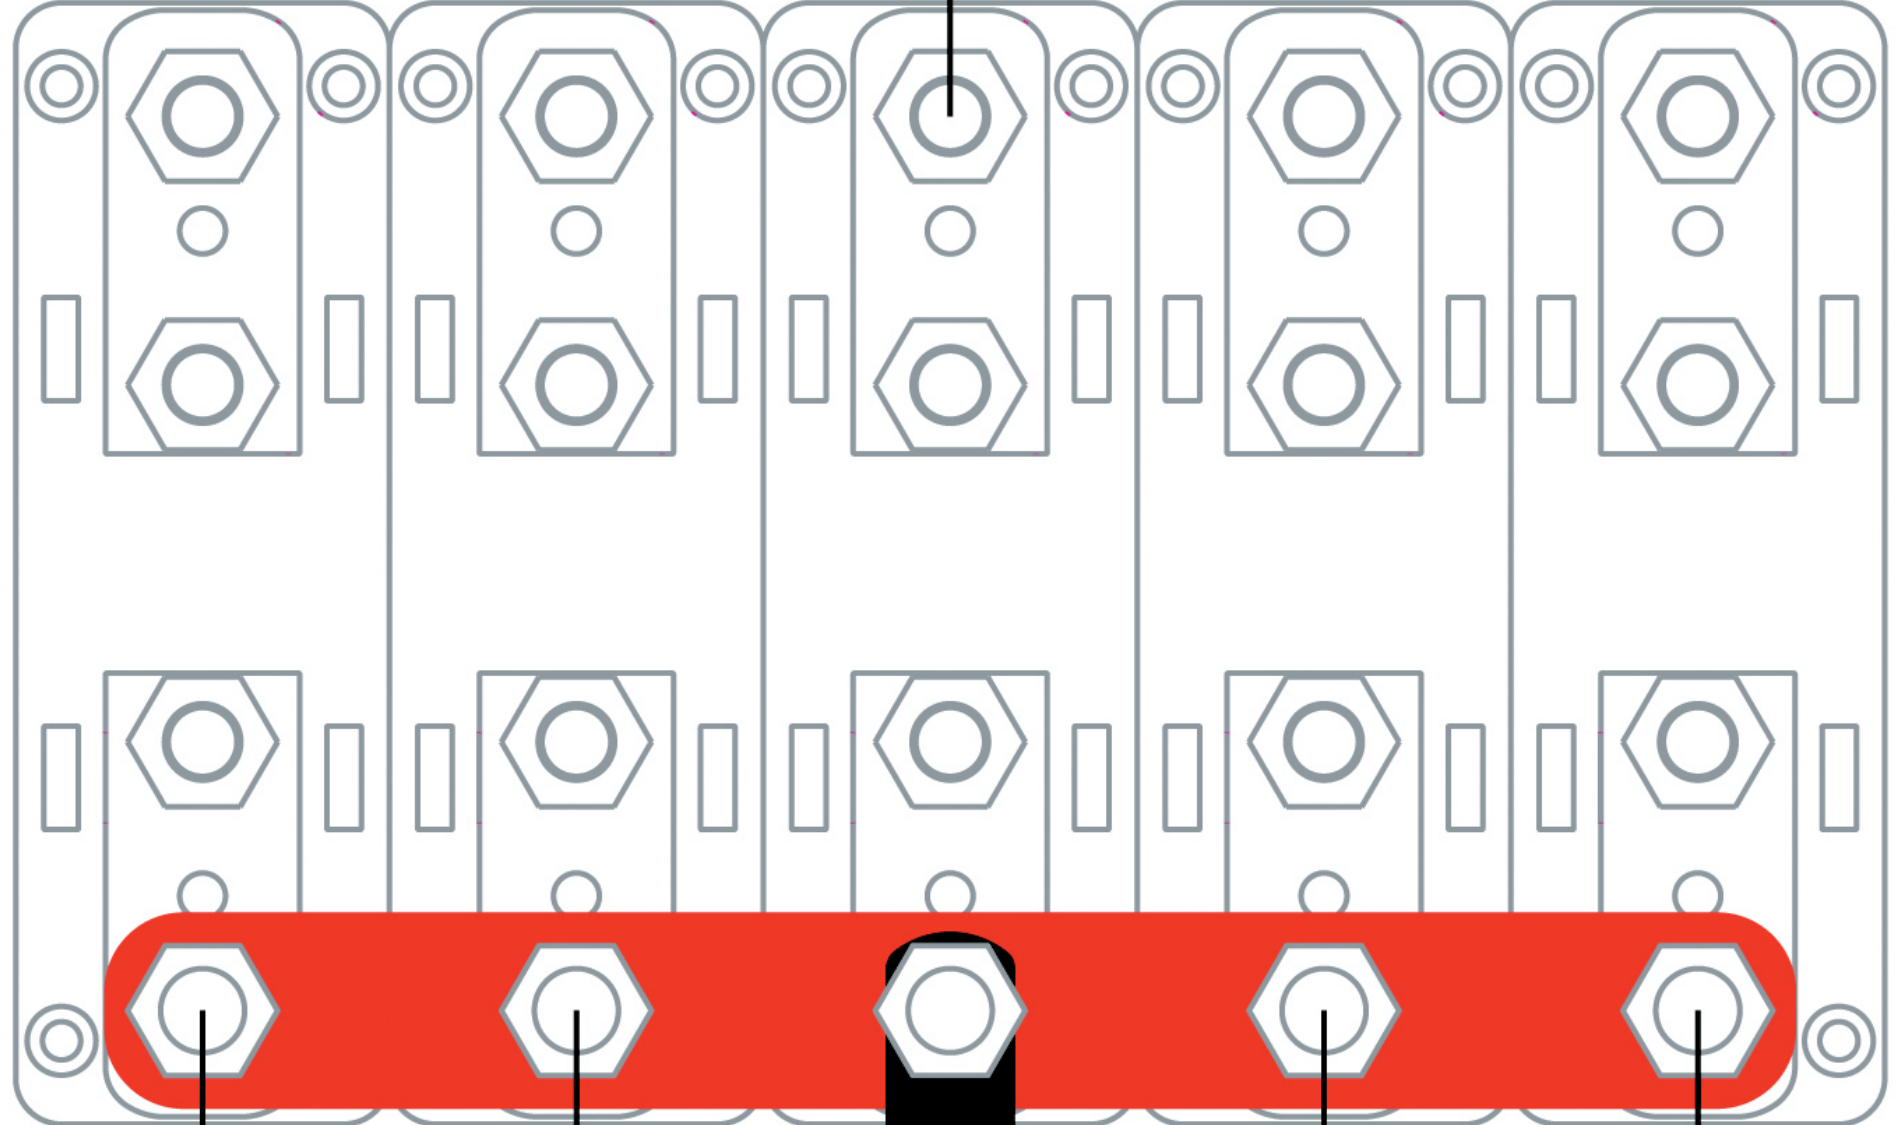

525 Amps

650 Amps

650 Amps

525 Amps

Bring supply cable to center of linkbar, and to highest loads